



J.E. ADAMS INDUSTRIES OWNERS MANUAL

MODEL# 29000-29003
29000UNI-29003UNI
29000-2M thru 29003-2M

- PAGE 2 PRODUCT INFORMATION
- PAGE 3 SPECIFICATIONS
- PAGE 4 IMPORTANT SAFETY INFORMATION
- PAGES 4-5 INSTALLATION
- PAGES 5-8 PROGRAMMING
- PAGE 8 OPERATING
- PAGE 8 MAINTENANCE
- PAGES 9 TROUBLESHOOTING
- PAGES 10-14 PARTS LIST
- PAGE 15-18 WIRE DIAGRAMS

PRODUCT INFORMATION

Please take a moment to fill out the information below in order to aid us with any future sales or service inquiries. Model number and serial number information can be found on the serial tag located inside the control box and/or on the lower exterior of the can. Key number can be found on the tag that comes attached to the keys. There may be more than one key number depending on unit.

Please keep this information with your records.

MODEL#:_____

SERIAL#:_____

KEY NUMBER(S):_____

DATE PURCHASED:_____

DISTRIBUTOR:_____

**J.E. Adams Industries
1025 63rd Ave. S.W.
Cedar Rapids, IA 52404
1-800-553-8861
www.jeadams.com**

SPECIFICATIONS:

Unit specifications: *(29000-29003, 29000UNI-29003UNI)*

Voltage: 120VAC, 60Hz
Amperage: (1)30 amp service is required for this unit
Weight: 260 lbs with pallet attached

Vac specifications: *(29000-29003, 29000UNI-29003UNI)*

Motors: (3) 120VAC Vacuum motor
Fuses: (3) 10 amp inline fuses

Shampoo specifications: *(29000-29003, 29000UNI-29003UNI)*

Compressor: (1) Thomas 120VAC, 1/12th hp compressor
Peristaltic pump: (2) Thomas peristaltic pumps, 12VDC

Unit specifications: *(29000-2M thru 29003-2M)*

Voltage: 120v, 60Hz
Amperage: (1)20 amp service is required for this unit
Weight: 260 lbs with pallet attached

Vac specifications: *(29000-2M thru 29003-2M)*

Motors: (2) 120VAC Vacuum motor
Fuses: (2) 10 amp inline fuses

Shampoo specifications: *(29000-2M thru 29003-2M)*

Compressor: (1) Thomas 120v, 1/12th hp compressor
Peristaltic pump: (2) Thomas peristaltic pumps, 12VDC

NOTE: "UNIT INTENDED FOR COMMECIAL USE ONLY"

Installation of 29000UNI, 29001UNI, 29002UNI and 29003UNI units are to be installed only by a qualified Unitec represented distributor or installer. Failure to do so may result in improper installation and may not be configured properly.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING (THIS APPLIANCE)


WARNING – To reduce the risk of fire, electric shock, or injury:

- Do not use on wet surfaces.
- Use only as described in manual. Use only manufactures recommended attachments.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- "Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes."
- "DO not use without dust bag and/or filters in place."


SAVE THESE INSTRUCTIONS

Installation Instructions:

- Determine location to mount unit ("**DANGER**" **"THIS EQUIPMENT INCORPORATES PARTS SUCH AS SWITCHES, MOTORS, OR THE LIKE THAT TEND TO PRODUCE ARCS OR SPARKS THAT CAN CAUSE AN EXPLOSION. WHEN LOCATED IN GASOLINE-DISPENSING AND SERVICE STATIONS INSTALL AND USE AT LEAST 20 FEET (6 M) HORIZONTALLY FROM THE EXTERIOR ENCLOSURE OF ANY DISPENSING PUMP AND AT LEAST 18 INCHES (450 MM) ABOVE A DRIVEWAY OR GROUND LEVEL."**
- Run 30 amp service to that location (*NOTE UNIT HAS WIRE PROVIDED UNDERNEATH TO CONNECT INCOMING POWER SUPPLY*)
- **Grounding Instructions:** This appliance must be connected to a grounded metal, permanent wiring system; or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment-grounding terminal or lead on the appliance.
- Mount unit to location and use fig. 1 for mount pattern
- If unit is vault ready configuration see fig. 1 for mounting and fig. 2 for vault tube location.

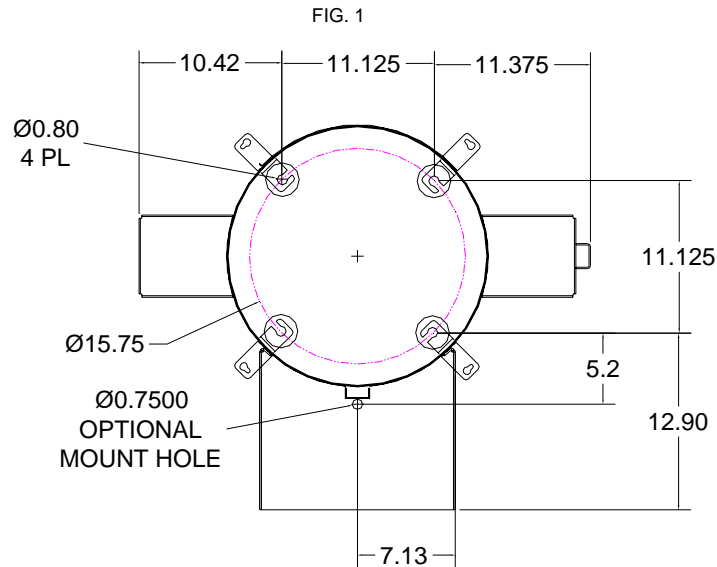

FRONT OF UNIT
FIG. 2 (VAULT TUBE LOCATION)
TOP VIEW

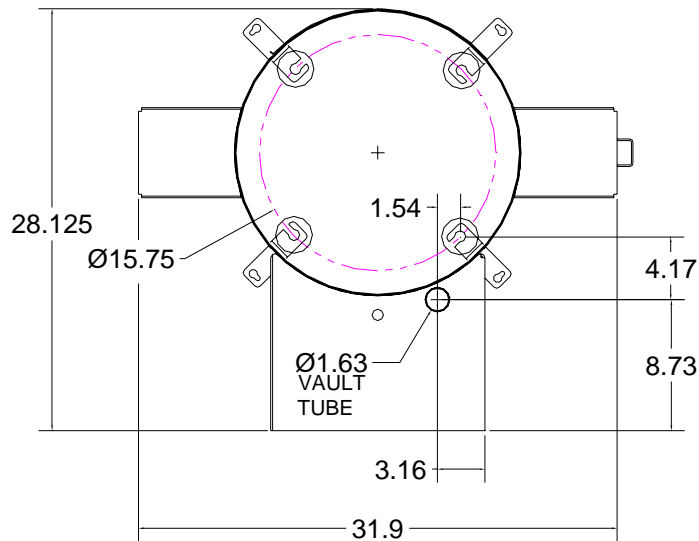

- Once unit has been installed use 5871B8 cap plugs supplied with unit to seal holes in canister bottom located in lower cleanout door. Then connect to power, insert shampoo and spot formula into bottom door and attach lids to appropriate bottles.
- Turn unit on and move to program instructions

Programming Instructions:

Coin acceptor:

- No programming to acceptor needed if unit was purchased with the standard Imomex Z32 electronic acceptor (8149-92 our part number) is pre-programmed to accept US quarters, .984 tokens, US \$1 coin and 1.073 token. Acceptor is pre-programmed before it is sent to J.E. Adams.
- If different acceptor was purchased, see additional literature sent along with unit for programming info.

Bill acceptor:

- Bill acceptor comes pre programmed from J.E. Adams and should not require any changes. If additional programming is needed to acceptors please refer to additional literature sent along with this unit.

Display:

- Unit may be programmed when received depending on information given at that the time of order.
- To program follow the instructions below.

Display programming with remote:

- 1) Press the red power button.
- 2) Timer will display 0000. At this time type in 4 digit access code. Note code will be 1234 until changed by customer.
- 3) Once code has been entered display should read ok. If display does not read ok, repeat step 1 and 2.
- 4) Press **CH +** button. Timer will display coin value. This should \$.25 and should not be changed.
- 5) Press the **CH +** button. Display will now read (**A: 30**) or may be a different time. (**A**) Will be the time per coin for the **VAC**. Set desired time per coin by using the **VOL –** to decrease or the **VOL +** to increase. Once time is entered move to next step.
- 6) Press the **CH +** button. Display will now read (**B: 30**) or may be different time. (**B**) Will be the time per coin for **TURBO**. Set desired time per coin by using the **VOL –** to decrease or the **VOL +** to increase. Once time is entered move to next step.
- 7) Press the **CH +** button. Display will now read (**C: 30**) or may be different time. (**C**) Will be the time per coin for **SHAMPOO**. Set desired time per coin by using the **VOL –** to decrease or the **VOL +** to increase. Once time is entered move to next step.
- 8) Press the **CH +** button. Display will now read **D**. **D** is not used.
- 9) Press the **CH +** button. Display will now read **E**. **E** is not used.
- 10) Press the **CH +** button. Display will now read **F**. **F** is not used.
- 11) Press the **CH +** button. Display will now read (on A). This is the number of coins to start **VAC**. Use the **VOL –** and **VOL +** to adjust. Once this is done press the **CH +** button and repeat for (B) **TURBO** and (C) **SHAMPOO**.
- 12) Press the **CH +** button. Display will read bonus time. Set if desired. See explanation at the end programming instructions.
- 13) Press the **CH +** button. Display will read debit mode. Set if desired. See explanation at the end programming instructions.
- 14) Press the **CH +** button. Display will read delayed start. Set if desired. See explanation at the end programming instructions.
- 15) Press the **CH +** button. Display will read **HLxx**. Set if desired. See explanation at the end programming instructions.
- 16) Press the **CH +** button. Display will read Restart off or restart on depending on what is set. Restart off will require a person to put in full amount after unit is

- turned off to reactivate. Restart on allows for additional coins to be put in the machine to keep unit running. To set use ***VOL –*** or ***VOL +*** to change.
- 17) Press the ***CH +*** button. Display will now read ***STD*** or ***USER*** or ***MIX***. To make a custom message use ***VOL +*** button to scroll to ***USER***. At this point press and hold ***CH +*** button until original message appears. At this time you may change the message simply by using the ***VOL –*** or ***VOL +*** buttons to change letters. ***Once message has been entered you must put the symbol / at the end of message.*** This will tell display that this is the end of the message.
- 18) Press the ***CH +*** button now 5 more times to exit programming.
- 19) Unit should now be programmed.

Program definitions:

- Bonus time settings:
 - Amount of time set in bonus time is added to regular time per coin/pulse(e.g. if you want to give 45 seconds for bonus time and your regular time per coin is 30 seconds, you would set bonus time at 00:15)
 - Bonus is disabled by setting bonus time to 00:00.
 - If bonus time is set to less than one minute, bonus time is added when bonus coin is reached and every coin after that until time expires.
 - If bonus time is set at 1:00 or more, bonus will be a “one time” bonus. Bonus time will only be added for bonus coin or multiples of bonus coin (e.g. 16th coin, 32nd coin, etc). Any other coin will on receive regular time per coin.
 - If bonus time is set to 99:00, when bonus coin is deposited, timer will show “-on-” and timer will continue to run until coin switch wire is shorted to ground by a loop detector or other switch closure for a minimum of two seconds.
- Debit and credit mode:
 - Debit mode: As coins are deposited display shows “\$1.75 MORE, \$1.50 MORE, \$1.25 MORE” etc. until start price is reaches. Once start price is reached display switches to time accumulating until no more coins have been deposited.
 - Credit mode: As coins are deposited display shows money accumulating (\$.25, \$.50, \$.75 etc). If timer is also set to delayed start mode timer will continue to show money accumulating until no more coins have been deposited. If timer is set to instant start, as soon as start price is reached, timer will change to time counting down.
 - Both mode: As coins are deposited display shows money accumulating (\$.25, \$.50, \$.75 etc). If start price is not reached, after 5 seconds timer will alternate between “add \$x.xx more” and amount of money already deposited.

Display programming with push button:

- Unit can be programmed using buttons that are located inside display. One is labeled **S2**, which is used to change from item to item. One is labeled **S1** which is used to set desired value. If you hold down **S1** this will cause numbers to decrease. If you repeatedly push **S1** numbers will increase.
- When programming with buttons use same instructions as remote except for the following. Where it says to press **CH +** use **S2** and where it says to use **VOL +** or **-** use **S1**.

Operating Instructions:

- Select desired function.
- Insert coins or bills to start desired function.
- If shampoo/spot is selected, it is recommended that you vacuum before applying formula.
- If other function is selected other than original selected item unit will recalculate timer based on the amount of money it takes to start the specific function.
- Once service is used, hang up hose.

Operating Instructions 29000UNI-29003UNI:

- Select desired function.
- Insert coins or bills or swipe credit card to start desired function. When credit card is selected swipe card and wait for activation.
- If shampoo/spot is selected, it is recommended that you vacuum before applying formula.
- If other function is selected other than original selected item unit will recalculate timer based on the amount of money it takes to start the specific function.
- Once service is used, hang up hose.

Changing fluids:



- Disconnect power. Unscrew cap from empty bottle. Remove empty bottle. Insert new bottle into unit. Insert line into bottle and screw cap onto bottle. Reconnect power


Maintenance:

- Filter bags should be taken out weekly and shaken out. Also it might be a good idea to keep a new set of bags on hand so that once a month or longer you can take original bags out and wash them.
- Check vac hose for cracks on a weekly basis.
- Check shampoo and spot formula bottles to assure that they are full.
- Clean canister with a stainless steel cleaner as needed.
- Check motor brushes approx. every 3 months for excessive wear. Motor brushes should be changed if they are shorter than ¼". ***Please disconnect power before doing this.***
- Check all shampoo lines and assembly for any signs of wear.
- All servicing of machine should be conducted by an authorized service representative.


Troubleshooting: ***DISCONNECT POWER BEFORE SERVICING***

Problem	Possible cause	Solution
Unit is not powered	Breaker inside unit is not in the on position	Flip breaker on
Display is not powering	Breaker inside unit is not in the on position Check transformer inside main power box in unit. Is there 24VAC at output terminal?	Flip breaker on Replace transformer (8131-2)
Display reads "fail"	Coin acceptor putting out continuous pulse Program in display may be lost	Press mode button on display. If fail does not go away replace coin acceptor. (8149-92) Reprogram display. If fail goes away and then comes back, replace battery in display.
Unit keeps blowing my breaker from my incoming power source	Inadequate wire size supplied to machine Wrong size breaker	Call electrician and install proper wire size for 30amp service versus length or run. Install correct breaker(only use wire size that is adequate to handle 30 amp breaker)
Fuses for vac motors keep blowing.	Inadequate wire size supplied to machine Motor brushes may be bad or too short	Call electrician and install proper wire size for 30amp service versus length or run. Replace motor brushes (8055BR)
Unit has lost suction	Vac hose clogged Filter bags need cleaned Vac hose is damaged Cleanout door gaskets torn or worn	Clean out debris from vac hose Clean out filter bags or replace (8076) Replace vac hose (2036) Replace gaskets (8159)
Unit has shut down For no apparent reason	This unit has a reset thermal limiter in the compressor. Unit may have shut down due to excessive heat	Turn off power to the machine and wait for a period of 5 minutes. Reapply power and activate machine.

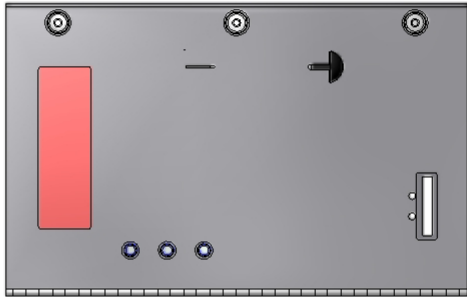
PART NO. 29000-7CBA		BILL OF MATERIALS			
NOTE:		ITEM	PART NUMBER	DESCRIPTION	QTY
1) ASSEMBLY ALL ITEMS AS SHOWN.		1	29000-199	GASKET, VALIDATOR MOUNT	1
2) USE WIRE ASSEMBLY 00-CB-DOOR TO WIRE THIS DOOR ASSEMBLY. THE 00-CB-DOOR IS LOCATED IN THE 00-CB-WIRE KIT CABLE PACKAGE PURCHASED FROM TIMBERLINE. THE 00-CB-WIRE KIT IS CALLED OUT UNDER THE 29000 TOP LEVEL ASSEMBLY.		2	29000-24	DISPLAY BRACKET	2
3) USE WIRE DIAGRAM S29000_CB_DOOR.		3	29000-25	HORN BRACKET	1
4) DO NOT OVER TIGHTEN PUSH BUTTONS ONTO DOOR. MAKE SURE THEY ARE SNUG AND ORINGS ARE NOT PROTRUDING FROM SIDE OF PUSH BUTTON. IF SO THEY ARE TO TIGHT.		4	00-CB-D-05	BLUE PUSH BUTTON	3
5) APPLY A GENEROUS AMOUNT OF HOT GLUE TO THE BACK OF THE NUT AND SWITCH. THIS WILL KEEP THE NUT FROM LOSENING UP.		4	29000-34	LEXAN WINDOW	1
6) WIRE ASSEMBLY 00-CB-D-06 FOR DISPLAY COMES WIRED TO PLUG DIRECTLY INTO CIRCUIT BOARD. WIRES MUST BE RAN THRU THE HOLE THAT IS DRILLED IN THE BOTTOM OF THE DISPLAY AND WIRED ACCORDING TO CONNECTOR THAT IS SUPPLIED WITH THE DISPLAY. THE YELLOW WIRE WHICH SHOULD BE LABELED D12 MUST GO INTO THE CONNECTOR LABELED 12 AND ALL OTHER WIRES WIRED IN DECENDING ORDER. FAILURE TO WIRE DISPLAY PROPERLY MAY RESULT IN MALFUNCTION OF DISPLAY OR POSSIBLE DAMAGE TO THE CIRCUIT BOARD. IF IN DOUBT ASK QUESTIONS.		5	29000-7CBW	CONTROL DOOR WELDMENT	1
		6	5611D2	NUT, 10-24 UNC KEPP- ZINC	4
		7	5629D2	#8 x 1/2 SELF TAPPING SCREW	4
		8	8000-11	ALARM, LAST COIN ALERT	1
		9	8000-15	BIG DIXMOR DISPLAY	1
		10	8149-92	IMONEX COIN ACCEPTOR - ELECTRIC	1
		11	8157	NUT, #6-32 KEPP NUT STAINLESS	4
		12	8659-24	LOCK COLLAR -SS	3
		13	8726	PUSH BUTTON	1
		14	8958-2	MEDECO SCREW LOCK	3
		15	8000-21	2 POLE FEMALE WAGO CONNECTOR	2
		16	5639D6	GROMMET	1
					
REV	NO.	DESCRIPTION		DATE	BY
THIS DOCUMENT SHALL NOT BE REPRODUCED NOR SHALL THE INFORMATION THEREIN BE USED BY OR DISCLOSED TO OTHERS EXCEPT AS AUTHORIZED BY J.E. ADAMS INDUSTRIES					
TITLE		SHAMPOO DOOR ASSEMBLY-W/CB			
UNSPECIFIED TOLERANCES		MATERIAL		CEDAR RAPIDS, IOWA	
1 PL ±.030		SCALE			
2 PL ±.010		DRAWN BY		CHAD K.	
3 PL ±.003		DATE		2/16/2009	
ANGLE ±1.0°		PART NO.		29000-7CBA	
				REV.	




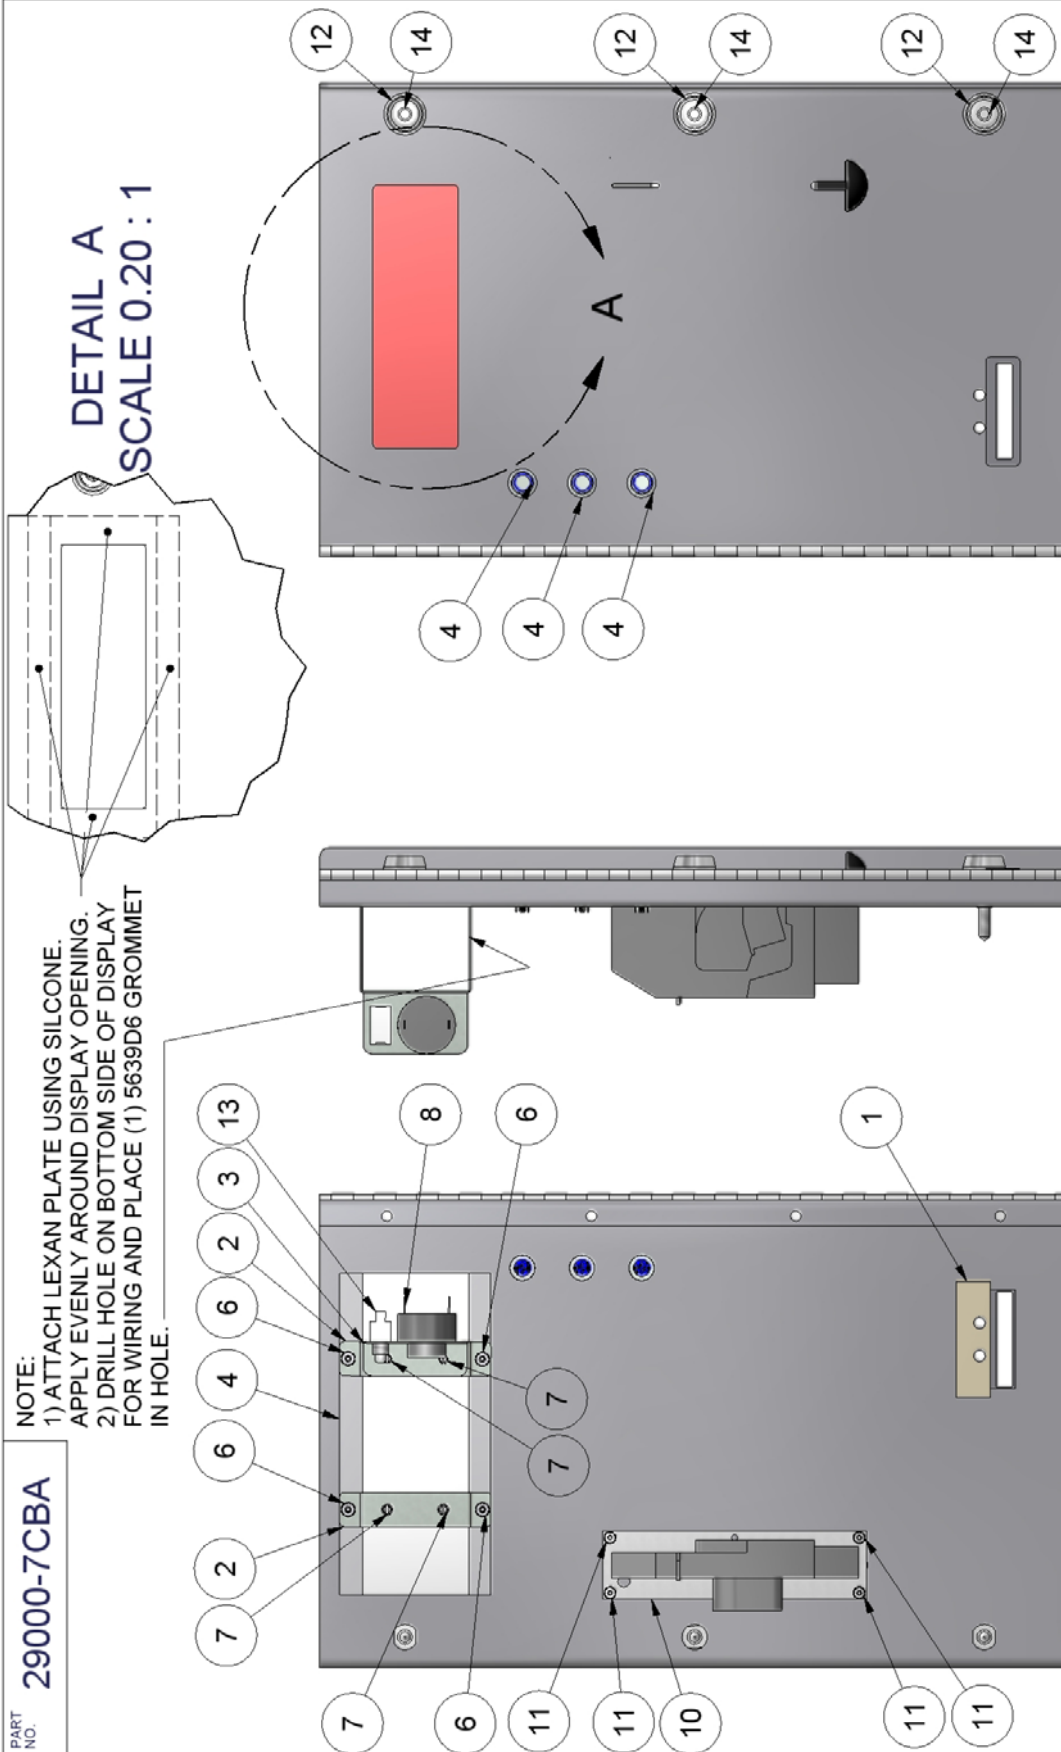


<div>THIS DOCUMENT SHALL NOT BE REPRODUCED NOR SHALL THE INFORMATION THEREIN BE USED BY OR DISCLOSED TO OTHERS EXCEPT AS AUTHORIZED BY J.E. ADAMS INDUSTRIES</div>					TITLE		SHAMPOO DOOR ASSEMBLY-W/CB	
					UNSPECIFIED TOLERANCES		MATERIAL	
					1 PL ±.030		SCALE	
					2 PL ±.010		DRAWN BY CHAD K.	
					3 PL ±.003		DATE 2/16/2009	
REV	NO.	DESCRIPTION	DATE	BY	PART NO.		REV	
					29000-7CBA			

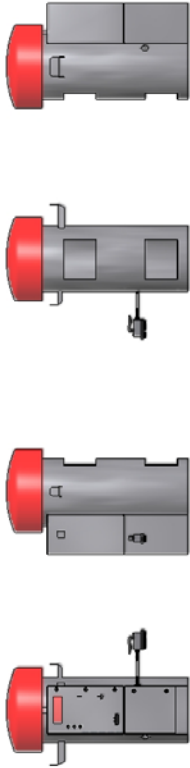
PART NO.		29000	
BILL OF MATERIALS		BILL OF MATERIALS	
ITEM	PART NUMBER	DESCRIPTION	QTY
31	5644D1	CAGE NUT	5
32	5647D2	RIVET 1/8"	16
33	5647D8	RIVET 3/16"	14
34	5871B8	CAP PLUG	8
35	8000-21	2 POLE FEMALE WIRE CONNECTOR	2
36	8000-22	2 POLE MALE WIRE CONNECTOR	2
37	8055	MOTOR, AMETEK 115V	3
38	8057	MOTOR GASKET	3
39	8076	FILTER BAG	4
40	8108	#10 x 1/2 TAP SCREW	6
41	8130-6	MARS 110V BILL VALIDATOR	1
42	8153-1	LATCH	4
43	8159	DOOR GASKET	2
44	8182	DISCONNECT POWER DECAL	2
45	8306	24" PLASTIC DOME	1
46	8549-1	FLEX STRAIN RELIEF	1
47	8615-5W	CLEANOUT DOORS	2
48	8659-24	LOCK COLLAR -SS	2
49	8925	FLOURESCENT BULB	3
50	8958-1	MEDECO SCREW LOCK	2
51	8958-2	MEDECO SCREW LOCK	2
52	9500WIN	WINTER SHAMPOO FORMULA	1
53	B5996-010	10AMP FUSE	3
54	B5997-001	FUSE HOLDER	3
55	8630	CARDBOARD BOX	1
56	00-CB-WIREKIT	COMPLETE WIRE CABLE PACKAGE	1
57	8939	PALLET	1
			
G	5015	CONVERTED UNIT TO CB-5002 CIRCUIT BOARD	2-09
REV	NO.	DESCRIPTION	DATE
THIS DOCUMENT SHALL NOT BE REPRODUCED NOR SHALL THE INFORMATION THEREIN BE USED BY OR DISCLOSED TO OTHERS EXCEPT AS AUTHORIZED BY J.E. ADAMS INDUSTRIES			
TITLE		SHAMPOO-SPOT-VAC	
UNSPECIFIED TOLERANCES		MATERIAL	
1 PL ±.030		SCALE	
2 PL ±.010		DRAWN BY CHAD K.	
3 PL ±.003		DATE 2/24/2009	
ANGLE ±1.0°		PART NO. 29000	
		REV. G	



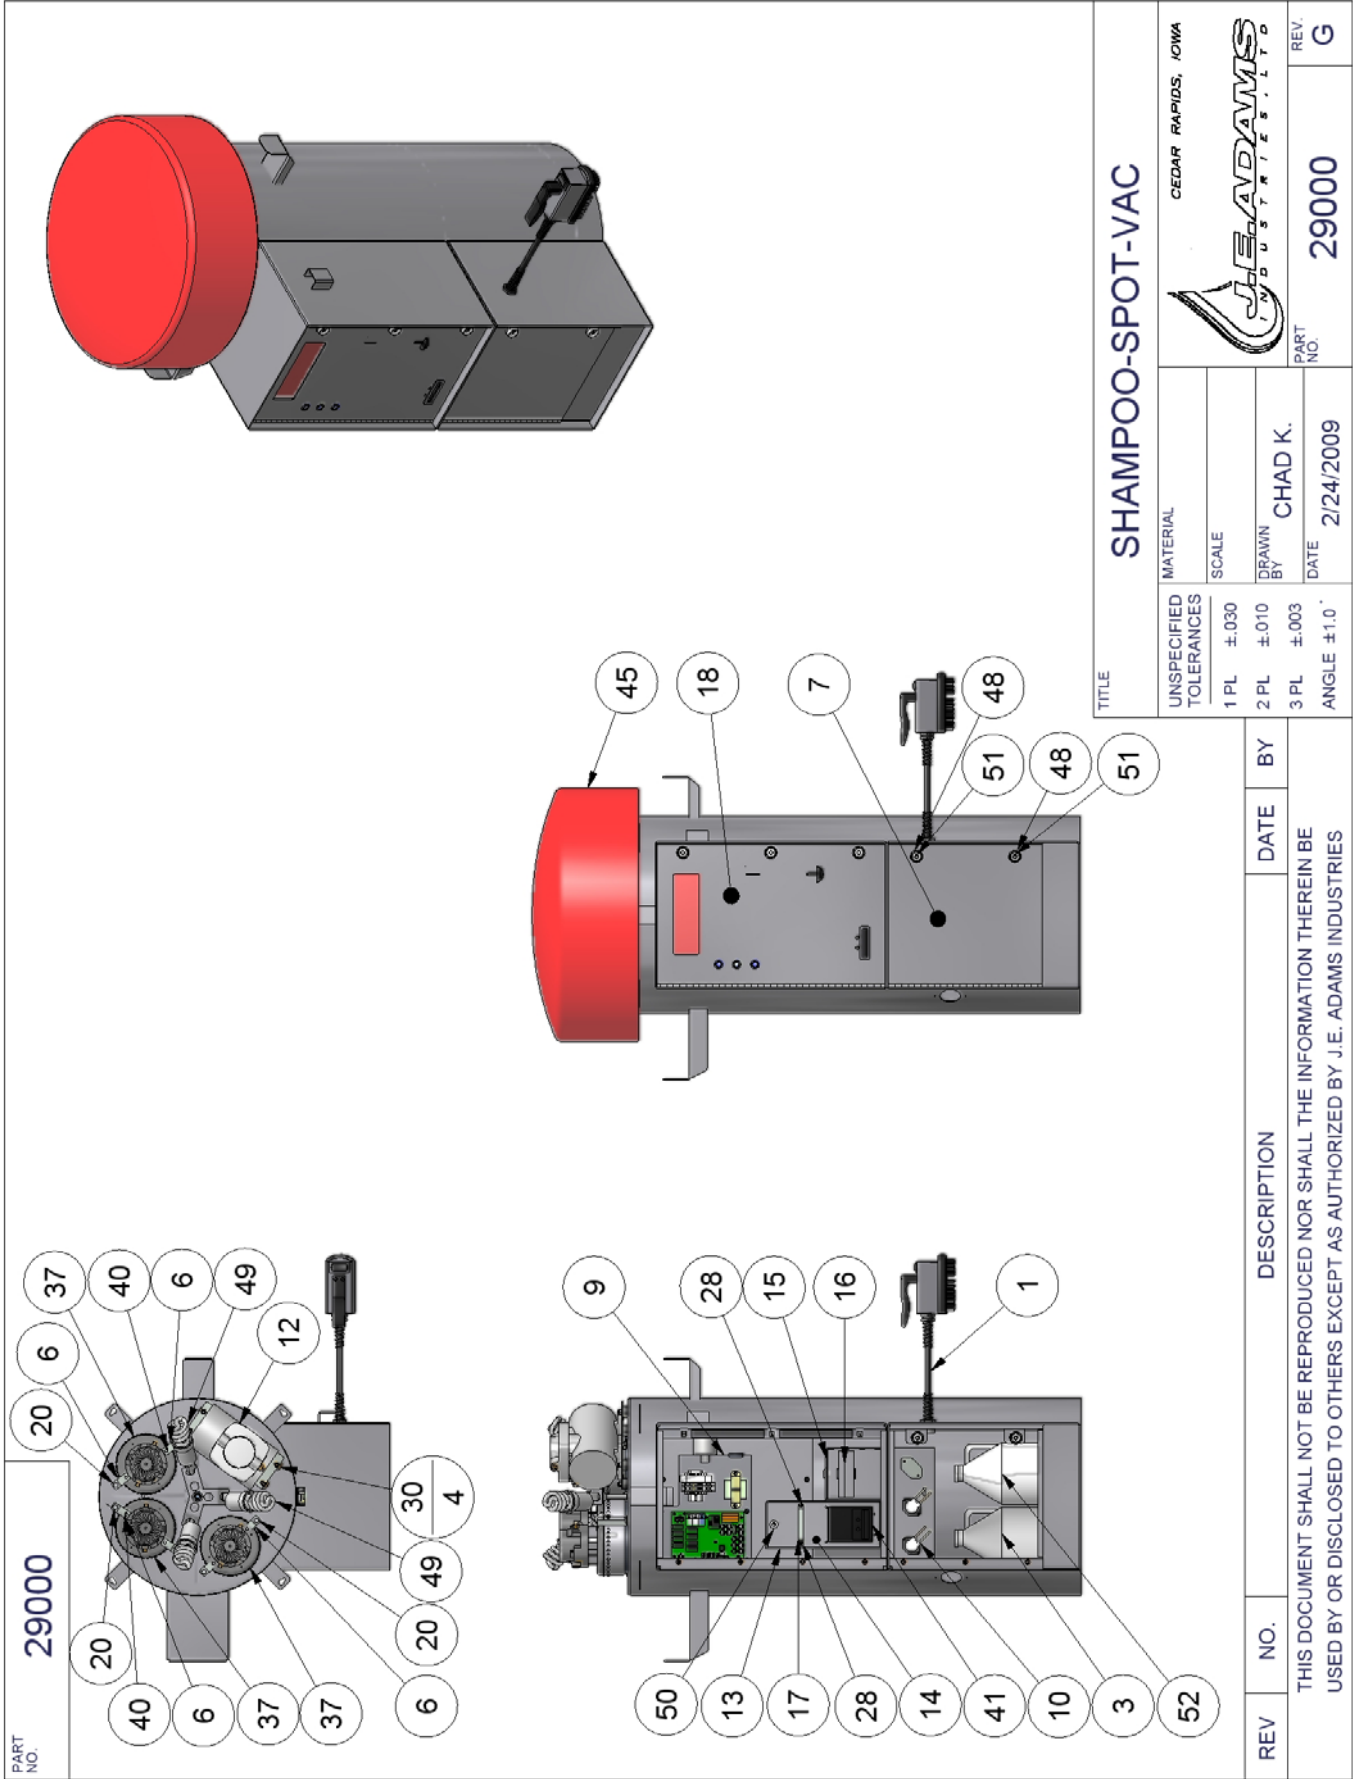

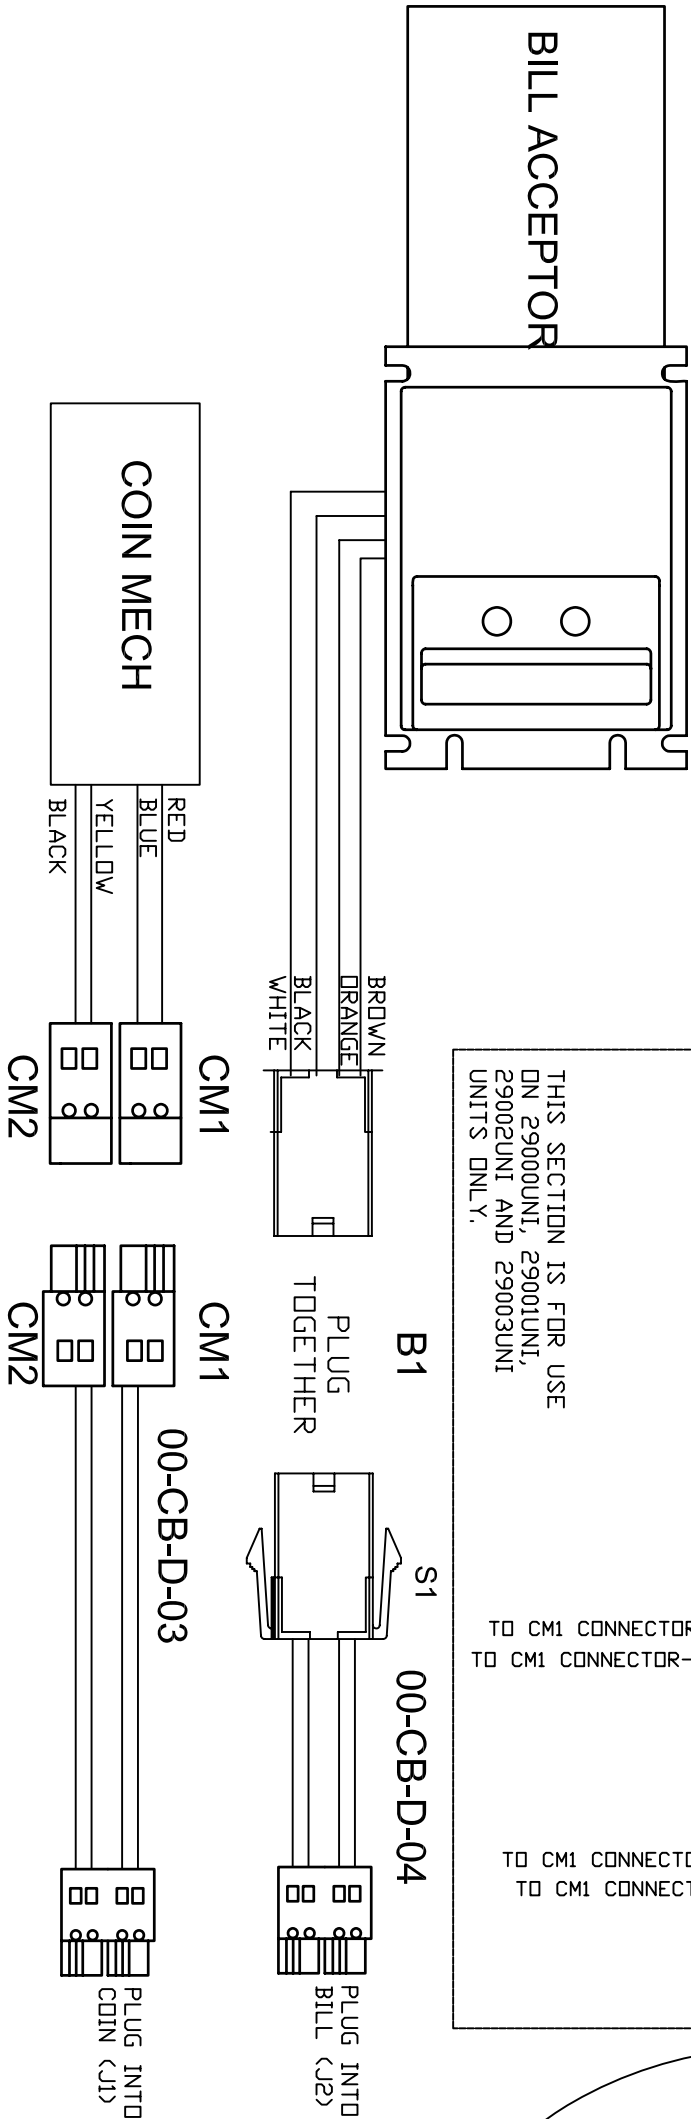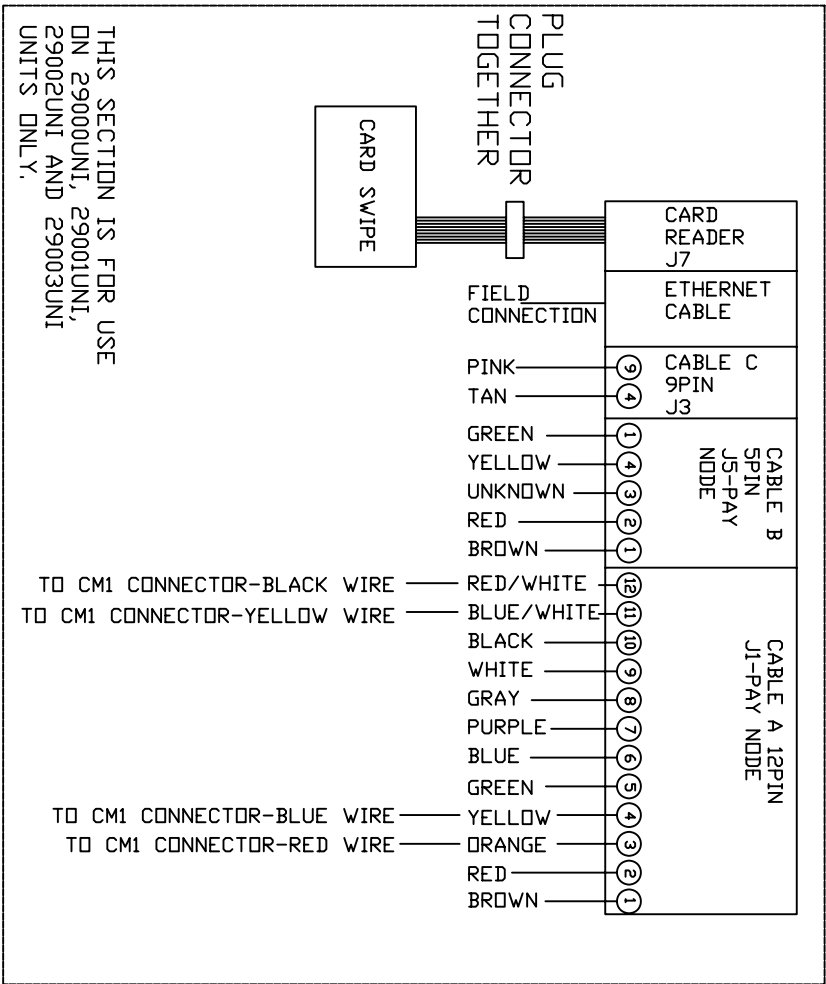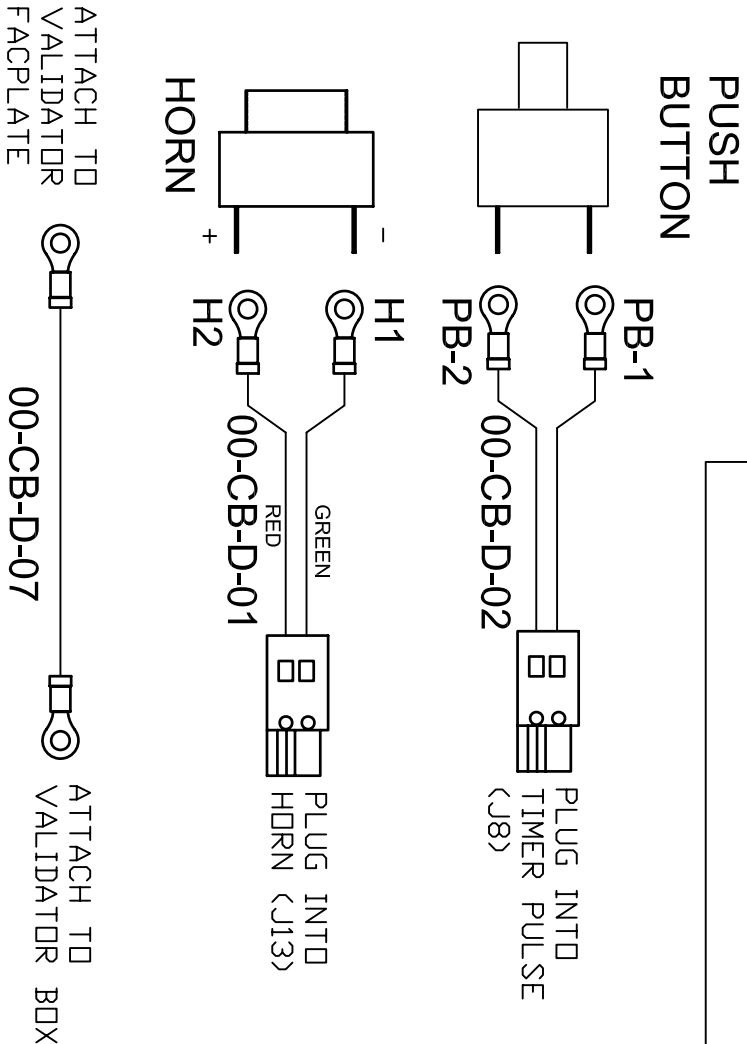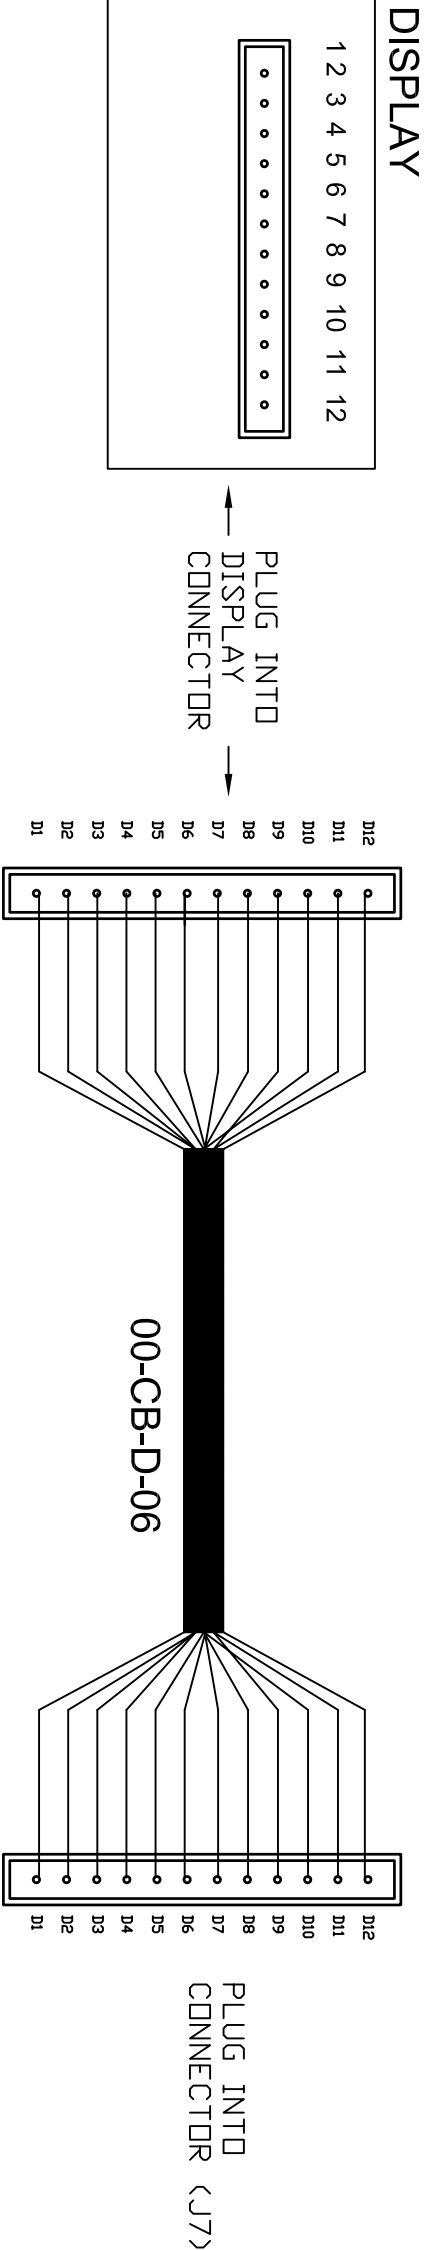


NOT USED ON 29000-2M
THRU 29003-2M MODELS

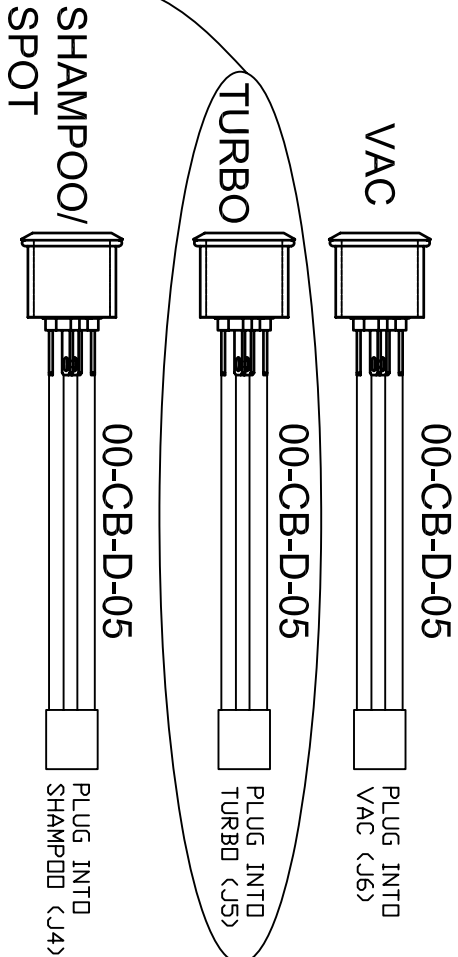

THIS DOCUMENT SHALL NOT BE REPRODUCED NOR SHALL THE INFORMATION THEREIN BE USED BY OR DISCLOSED TO OTHERS EXCEPT AS AUTHORIZED BY J.E. ADAMS INDUSTRIES					PART NO. S29000_CB_DOOR					<div><div>CEDAR RAPIDS, IOWA</div></div>					UNSPECIFIED TOLERANCES 1 PL ±.030 2 PL ±.010 3 PL ±.003 ANGLE ±1.0°					TITLE CONTROL DOOR WIRING 29000 SERIES UNIT				
B	5891	ADDED NOTE			3-19-10	CK				DRAWN BY	CK	DATE	3-2009	SCALE	-	REL. FOR PROD.	-	MATERIAL	-	PART NO.	S29000_CB_DOOR	REV. LEVEL	B	
A	5521	ADDED UNITEC CC TO DIAGRAM			2-10	CK																		
REV	NO.	DESCRIPTION			DATE	BY																		


PART NO.	DESCRIPTION
22000000	CD TMD

VAC 2

VAC 1

NOTE


1) VAC 3 AND FUSE
NOT USED ON
MODELS 29000-2M
THRU 29003-2M.

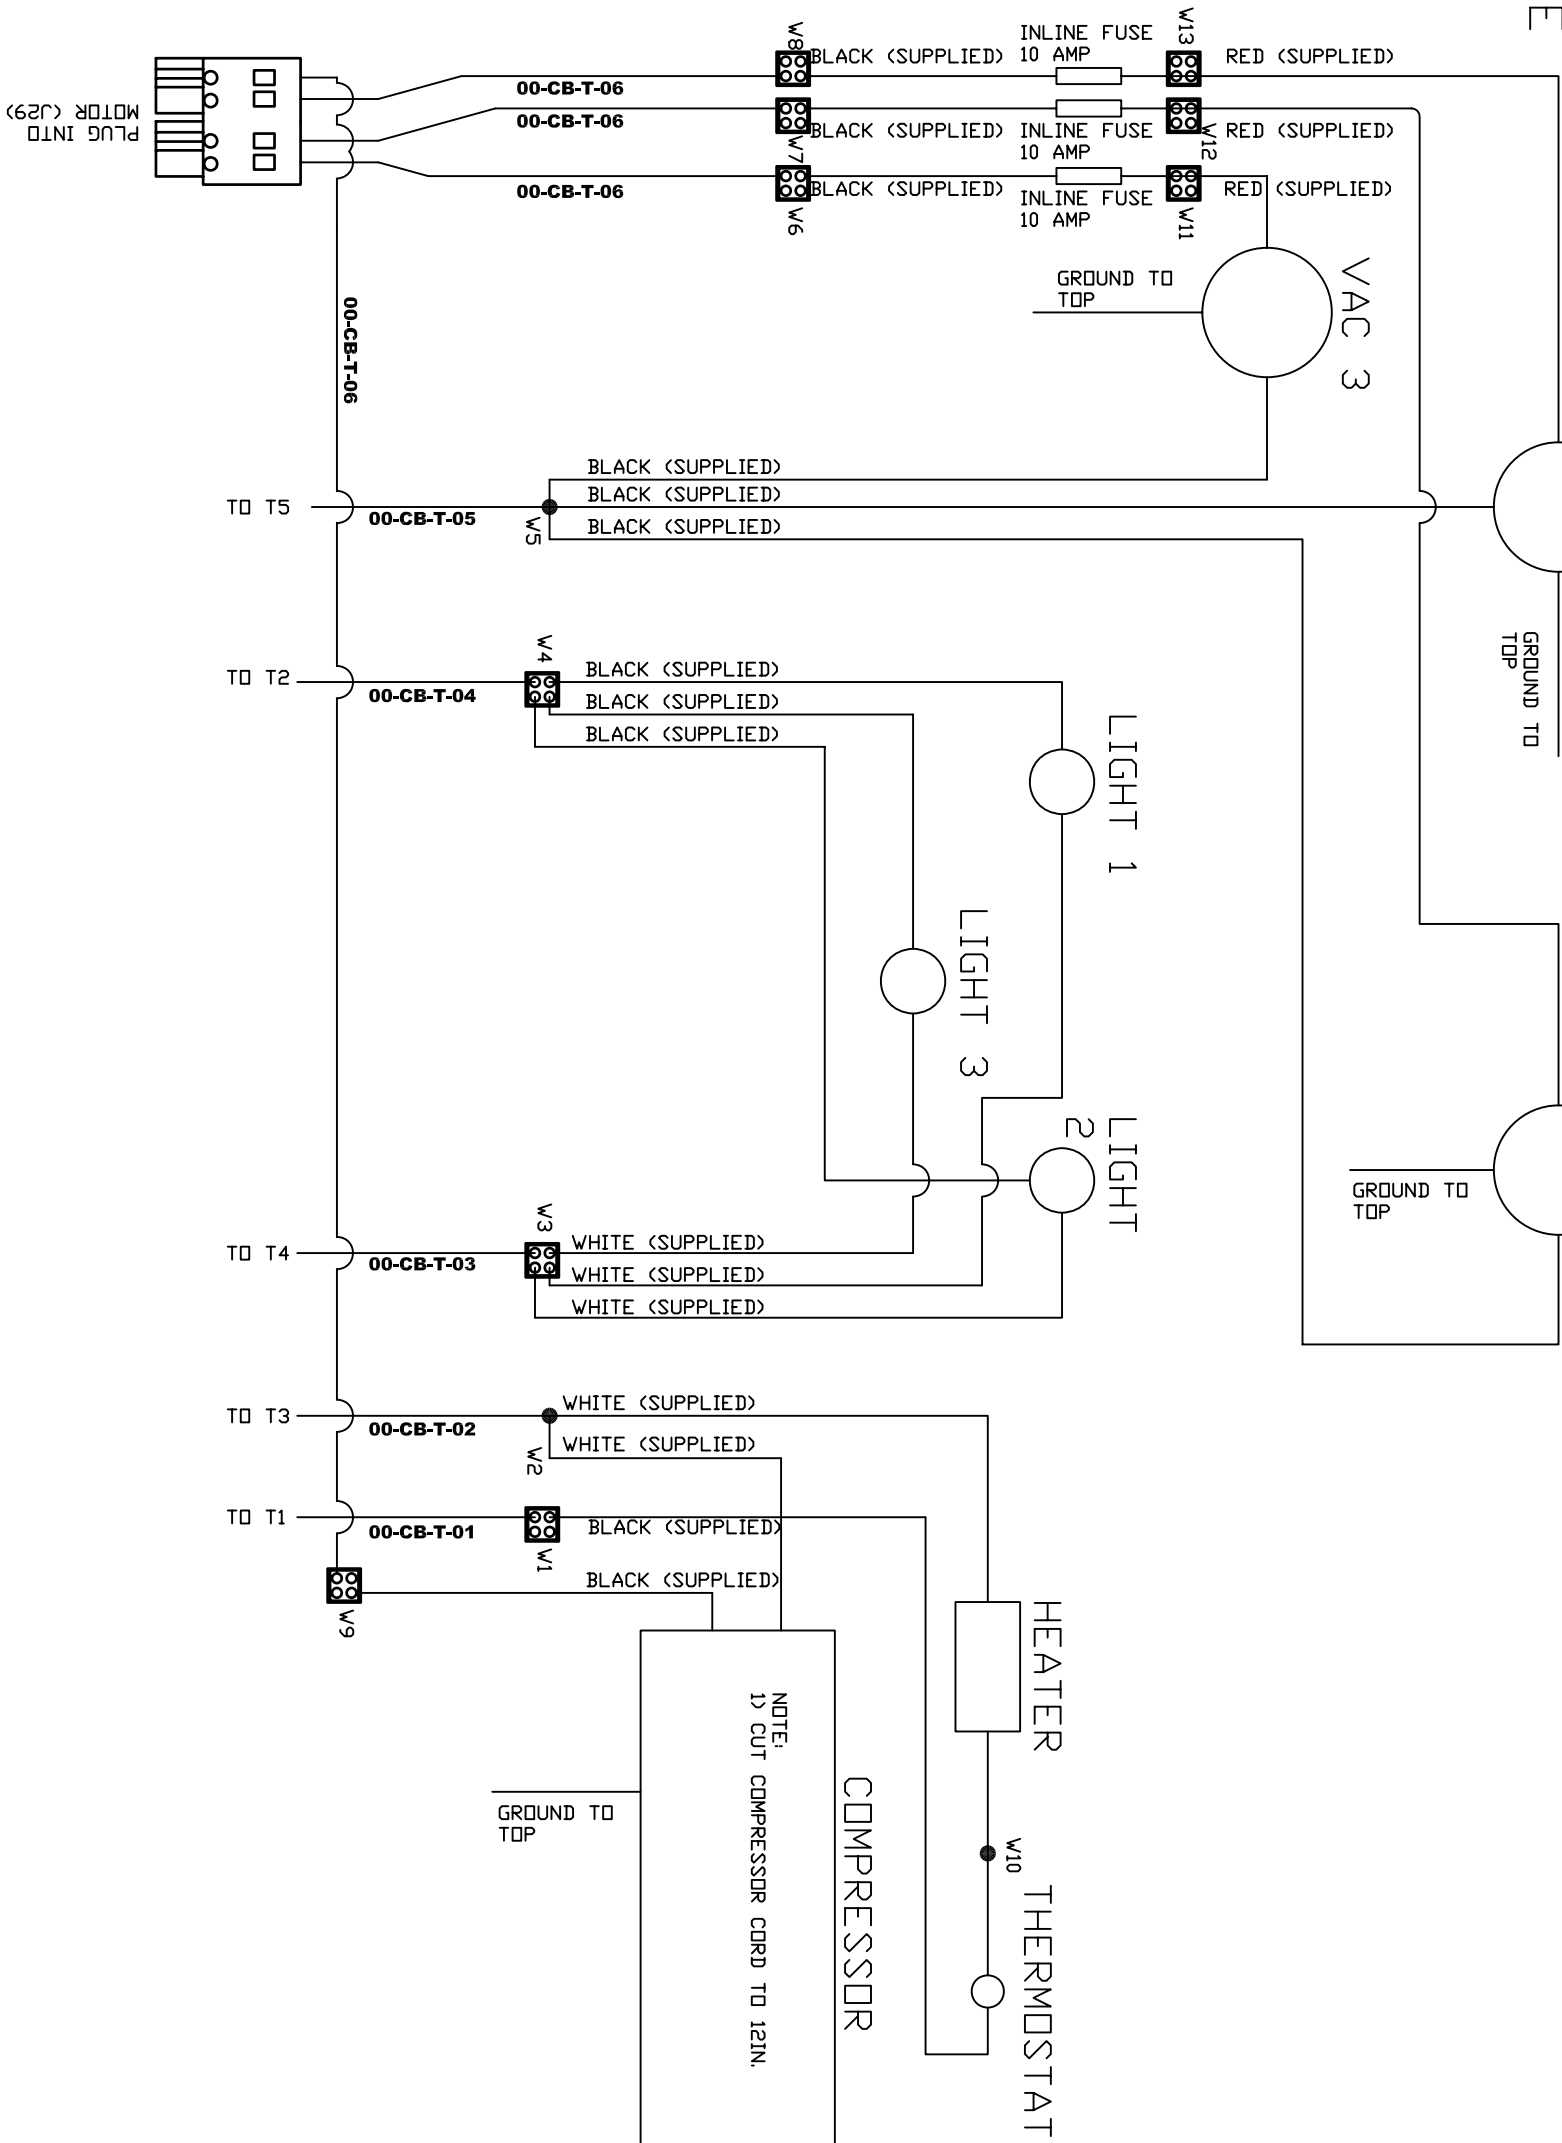

A	5892	ADDED NOTE 1	5-20-10	CK
REV	NO.	DESCRIPTION	DATE	BY

THIS DOCUMENT SHALL NOT BE
REPRODUCED NOR SHALL THE
INFORMATION THEREIN BE USED
BY OR DISCLOSED TO OTHERS
EXCEPT AS AUTHORIZED BY
J.E. ADAMS INDUSTRIES


PART NO.
S29000_CB_TOP

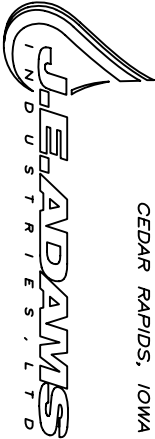

CEDAR RAPIDS, IOWA


UNIT TOP WIRING 29000 SERIES UNIT					TITLE
UNSPECIFIED TOLERANCES					
1 PL	± .030				
2 PL	± .010				
3 PL	± .003				
ANGLE ± 1.0°					
DRAWN BY	CK	DATE	3-2009	SCALE	-
MATERIAL	-	PART NO.	S29000_CB-TOP	REL. FOR PROD.	-
					REV. LEVEL
					A

— NOT USED IN THIS ASSEMBLY, USED IN FRAGRANCE PUMP ASSEMBLY ONLY.










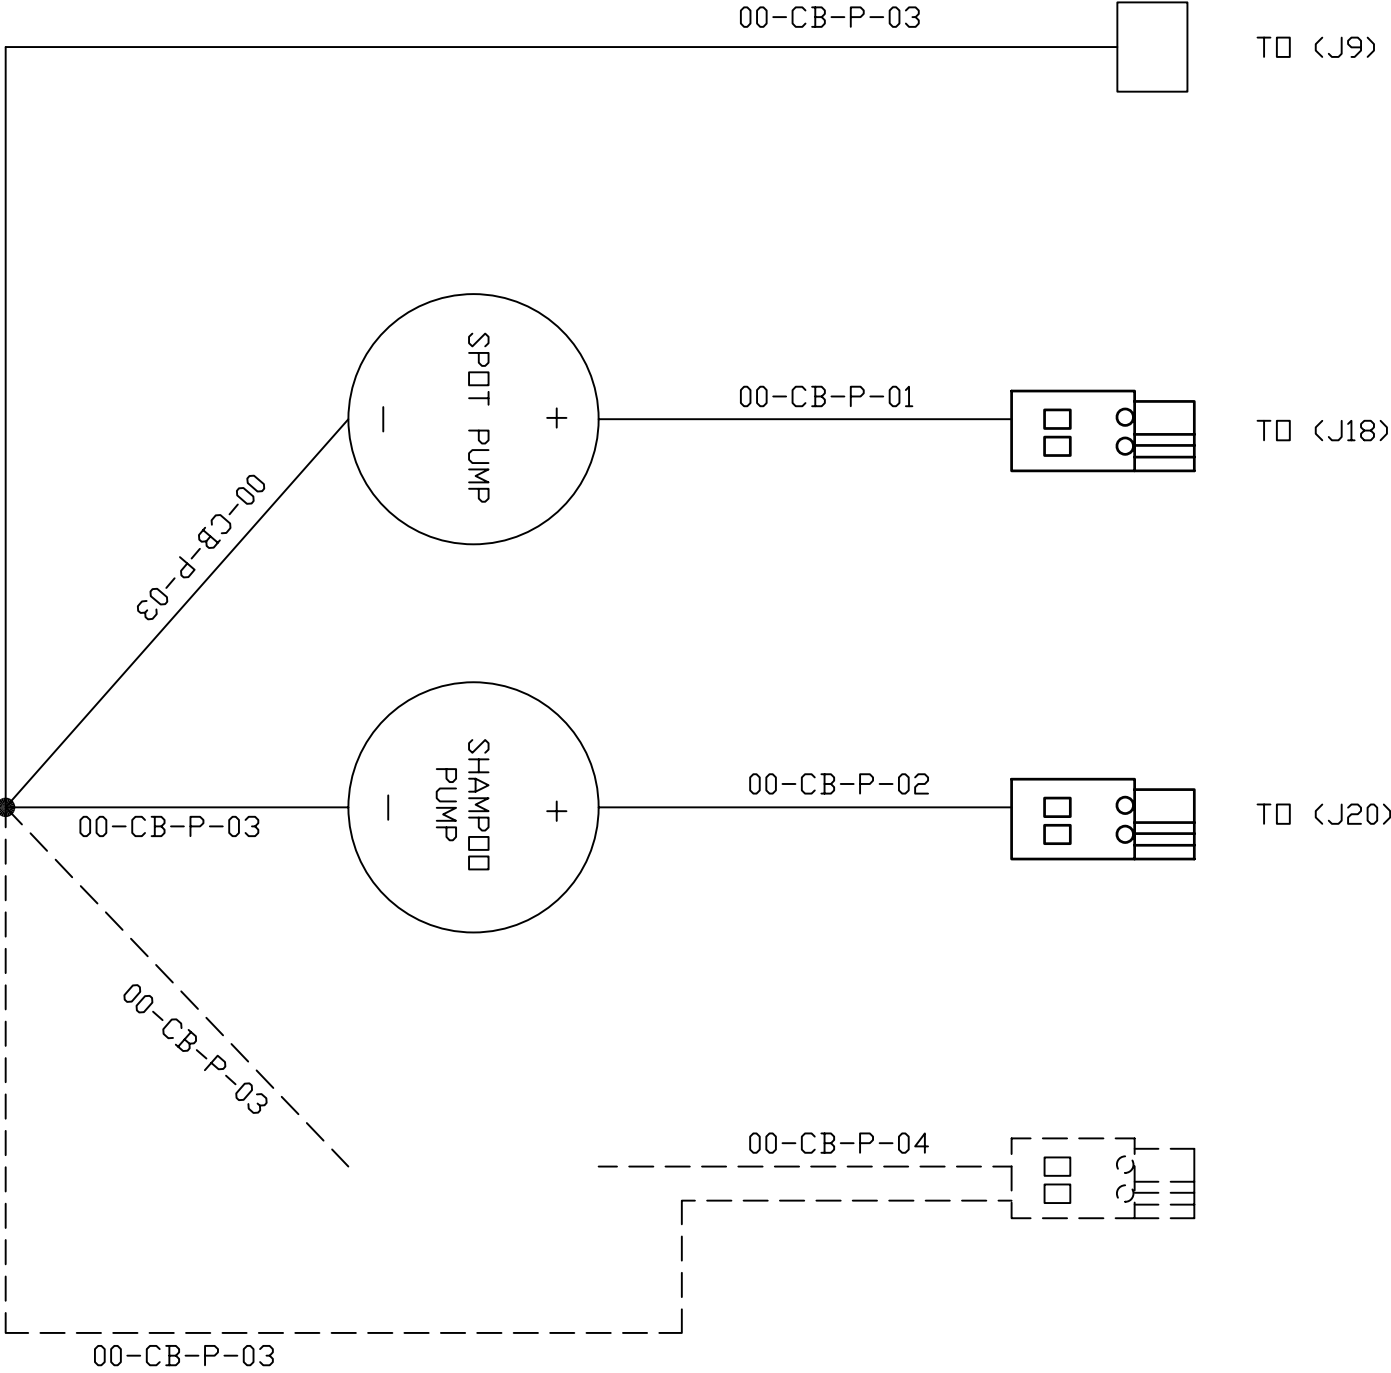


PUMP ASSEMBLY

SHAMPPOO BRUSH ASSEMBLY



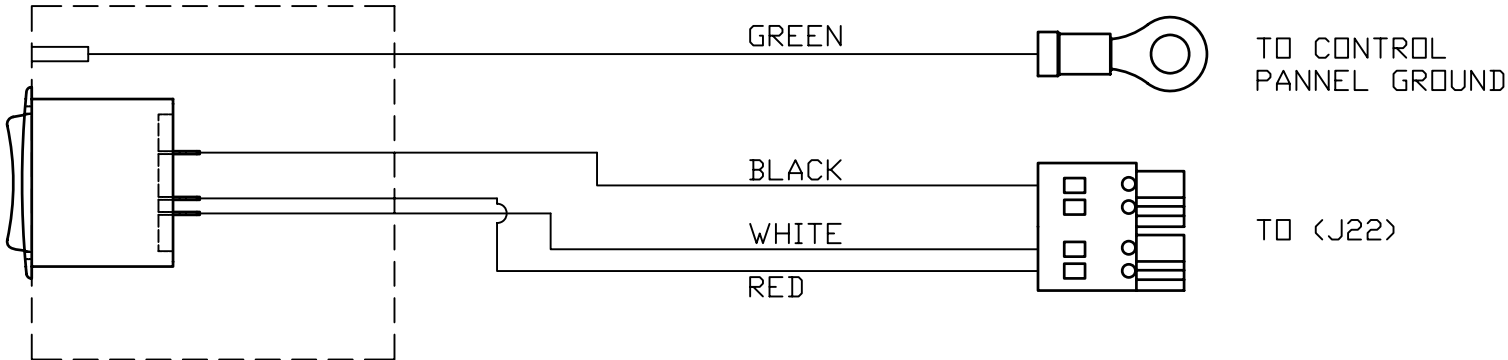



THIS DOCUMENT SHALL NOT BE REPRODUCED NOR SHALL THE INFORMATION THEREIN BE USED BY OR DISCLOSED TO OTHERS EXCEPT AS AUTHORIZED BY J.E. ADAMS INDUSTRIES				PART NO. S29000_CB_PUMP		<div><div><div><div></div><div>CEDAR RAPIDS, IOWA</div></div><div><div>J.E. ADAMS</div><div>INDUSTRIES, LTD</div></div></div></div>		UNSPECIFIED TOLERANCES 1 PL ±.030 2 PL ±.010 3 PL ±.003 ANGLE ±1.0°		TITLE WIRE DIAGRAM, 29000 PUMP ASSEMBLY			
REV	NO.	DESCRIPTION	DATE	BY	DRAWN BY CK	DATE 3-16-09	SCALE -	REL. FOR PROD. -	PART NO. S29000_CB_PUMP	REV. LEVEL -			

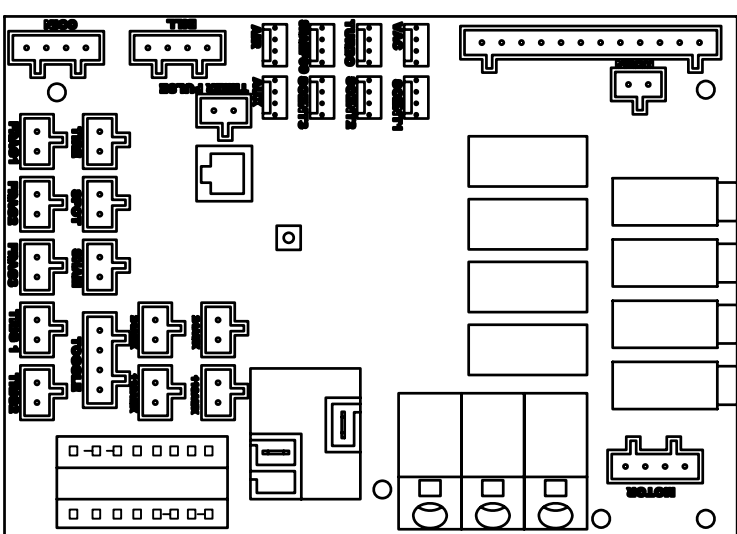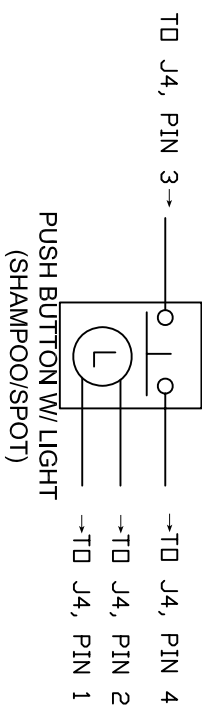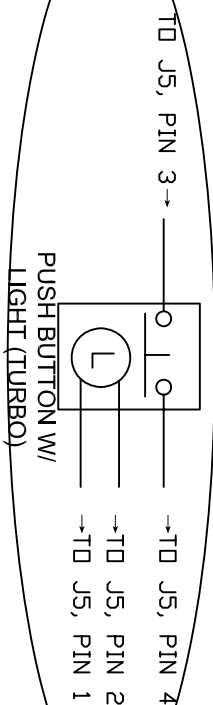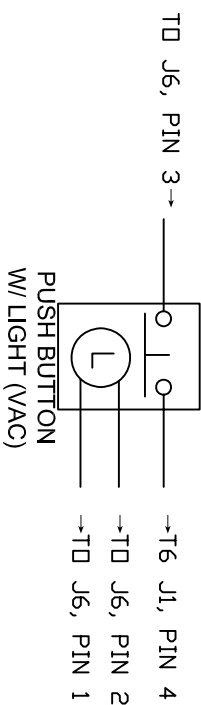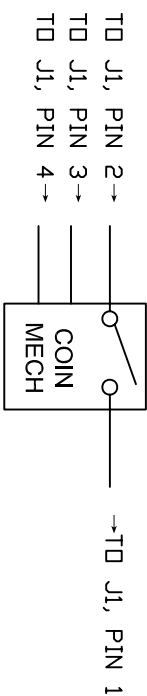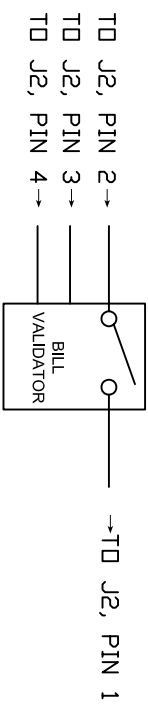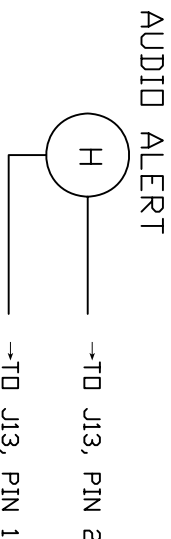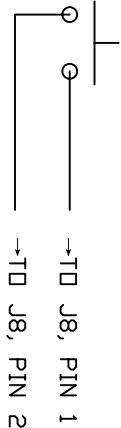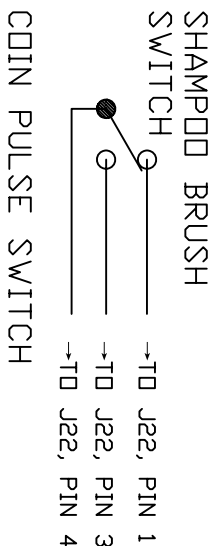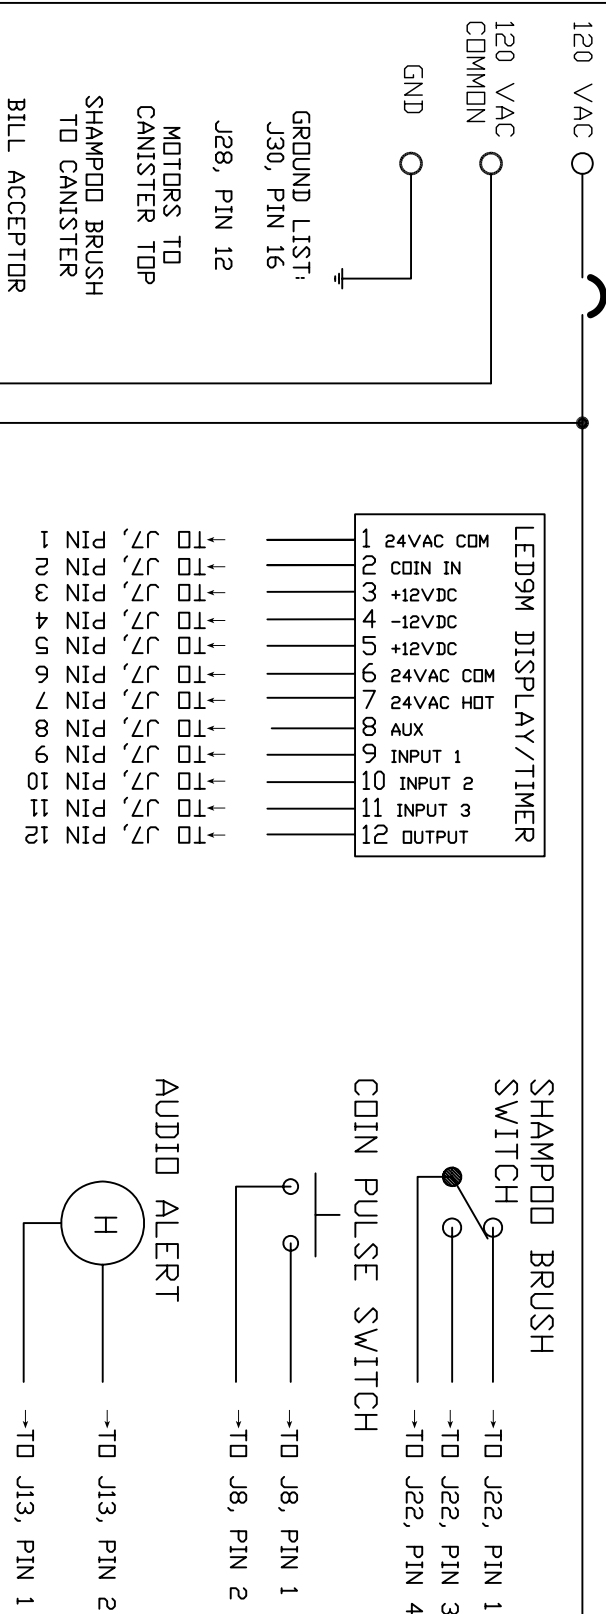

ALL (J) REFERENCES
ARE TO THE CIRCUIT
BOARD. SEE CB-5002
BOARD CONFIG (PDF)
FOR CIRCUIT BOARD
LAYOUT.

NOT USED ON-
MODELS
29000-2M THRU
29003-2M

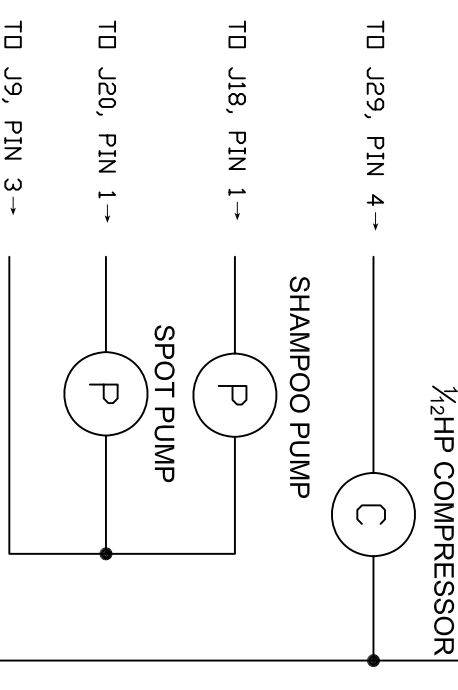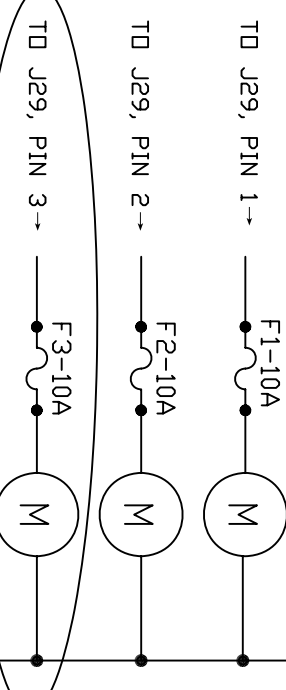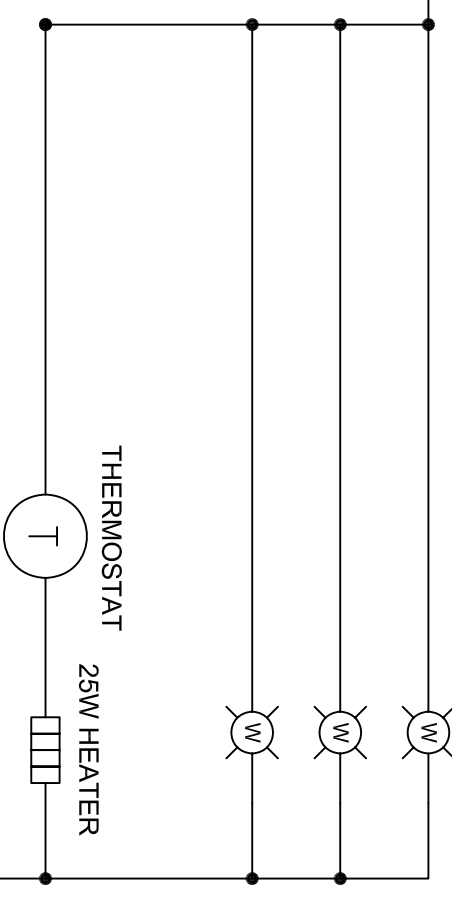

				THIS DOCUMENT SHALL NOT BE REPRODUCED NOR SHALL THE INFORMATION THEREIN BE USED BY OR DISCLOSED TO OTHERS EXCEPT AS AUTHORIZED BY J.E. ADAMS INDUSTRIES				PART NO.		S29000-CB-ELEC		 CEDAR RAPIDS, IOWA		UNSPECIFIED TOLERANCES		TITLE 29000 ELECTRICAL SCHEMATIC W/CB															
A	5893	ADDED INFO FOR 29000-2M THRU 29003-2M				5-20-10	CK					FRACT. $\pm 1/32$		DRAWN BY		CK		DATE		3-09		SCALE		-		REL FOR PROD.		REV. LEV		A	
REV	NO.	DESCRIPTION				DATE	BY					2 PL $\pm .020$																			
												3 PL $\pm .010$																			
												ANGLE $\pm 1.0^\circ$																			